


GB AWG 856

A. "On/Off" indicator light

B. "On/Off" button

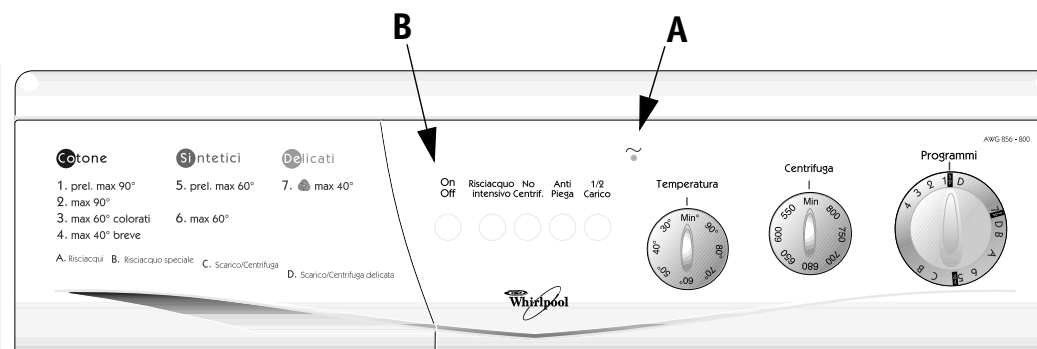

* : option / Yes : add the detergent

1 For improved garment care spin speed is restricted to 800 rpm in this programme.

2 For improved garment care spin speed is restricted to 800 rpm in this programme.

Programme selector knob	Programme		Care Labels	Type of wash/Notes	Max. Load Kg	Detergent and Additives			Options				Spin speed selector rpm	Temperature Selector °C
						Pre-wash	Main wash	Fabric Softener	Half Load	Intensive rinse	Rinse Hold	No spin		
1		Cotton with prewash		Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	yes	yes	*	*	*	—	*	1	Max. 90°
2		Cotton	 	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	yes	*	*	*	—	*	1	Max. 90°
3		Coloured Cotton	 	Average to heavily soiled, long wearing and temperature stable textiles in cotton and linen.	5.0	—	yes	*	*	*	—	*	1	Max. 60°
4		Quick wash	 	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	yes	*	*	*	—	*	1	Max. 40°
B		Special rinse for cotton wash	—	Programme for treating wash with starch or softener. The programme ends with a long spin cycle.	5.0	—	—	*	—	—	—	*	1	—
C		Drain + Spin	—	Drain, with final spin. Alternative method for unloading laundry earlier.	5.0	—	—	—	—	—	—	*	1	—
5		Synthetic with prewash		Heavily soiled shirts, blouses, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	yes	yes	*	—	—	*	*	2	Max. 60°
6		Synthetic	 	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	—	yes	*	—	—	*	*	2	Max. 60°
A		Rinse	—	Rinse program, ending with a spin cycle.	2.5	—	—	*	—	—	*	*	2	—
B		Special rinse for synthetic fabrics	—	Programme for treating wash with starch or softener. The programme ends with a long spin cycle.	2.5	—	—	*	—	—	*	*	2	—
D		Drain + Spin	—	Drain, with final spin. Alternative method for terminating the "Synthetic", "Delicate" and "Wool" programme and unload the laundry earlier.	2.5	—	—	—	—	—	—	*	2	—
7		Wool		Only machine washable woollens with pure new wool label. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	yes	*	—	—	*	*	2	Max. 40°
D		Drain + Spin for wool	—	Drain, with final spin. Alternative method for terminating the "Synthetic", "Delicate" and "Wool" programme and unload the laundry earlier.	1.0	—	—	—	—	—	—	*	2	—

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 20055

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours:minutes)
2 - Cotton	90°	5.0	55	1.80	2:19
3 - Cotton	60°	5.0	49	0.95	2:00
3 - Cotton	40°	5.0	49	0.50	1:50
6 - Synthetics	60°	2.5	52	0.78	1:10
6 - Synthetics	40°	2.5	52	0.42	1:00
7 - Wool	40°	1.0	52	0.24	0:45

Prewash cycle increases programme duration by approx. 15 minutes. Consumption data were measured in normalized conditions in compliance with Standard IEC 60 456. The data on the "Energy Label" refer to programme "Coloured Cotton 60° C". Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" in the booklet.

1. Make sure that the **Programme selector** is set to "Stop".
2. Open the tap.
3. Set the **Programme Selector** to the desired programme.
4. Set the **thermostat knob** to the desired temperature.
5. Set the **spin selector knob** to the desired speed.
6. **Special options** can be selected, if required.
7. Check that the door is well closed and turn on the washing machine by pressing the "ON/OFF" button. The indicator lights up, indicating that the washing machine is on.

SELECT ANY DESIRED OPTION

"Half Load" button (depending on model)

- Reduces water consumption above all during rinsing.
- Suitable for lightly soiled laundry and small loads (max 2.5 kg).

Note: reduce the detergent quantity.

"Intensive Rinse" button (depending on model)

- More water and a longer time in rinse cycle is added.
- This option is especially recommended in areas with extremely soft water, for baby linen and helps people with skin allergies.

"Rinse Hold" button (depending on model)

in synthetic and wool programmes only

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicate".
- This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

To terminate the "Rinse Hold" option (depending on model)

in synthetic and wool programmes only

- Press the Rinse hold button again; the load will be spun according to the selected programme.

If you do not wish to spin the clothes, turn the programme selector knob to the drain programme, after pressing the "No Spin" button.

"Eco Wash" button (eco) (depending on model)

- Reduces the temperature to 60° when the thermostat is set to a higher temperature.

"No Spin" button

- Especially for delicate garments to avoid wear and tear caused by the spin.

Note: in the "Cotton" and "Synthetics" programmes the machine will perform a short spin at a low speed, even if the spin cycle has been disabled, so as to optimise rinsing operations.

DOOR LOCK

The door locks automatically after the programme start until the end of the programme. If the programme selector is moved to the "Stop" position or if the electricity supply is interrupted, then after approximately two minutes the door is released. In this case do not open the door, because hot water could come out of the door.

PROGRAMME RESELECTION

To change a programme when a cycle has already begun:

1. Switch off the appliance by pressing the "ON/OFF"  button.
2. Select the new programme.
3. Start the programme by pressing the "ON/OFF"  button.

TO INTERRUPT THE RUNNING PROGRAMME

To interrupt the running programme and continue it at a later time:

1. Press the "ON/OFF"  button.
2. After the desired interval has passed, press the "ON/OFF"  button again.

END OF WASH CYCLE

1. At the end of the programme the programme selector moves to the "Stop" position.
2. To unload the machine wait for the door to unlock (approx. 2 minutes).
3. Switch off the appliance, open the door and unload the washing.
4. Close the tap and leave the door ajar to allow the drum to dry out.

NOTES AND INDICATIONS FOR USE

• **SPIN SPEED CONTROL**

Spin speed may be reduced automatically or may even be excluded in case of small loads containing highly absorbing garments (e.g. bath robes, towels, etc).

This reduces damage to fabric and to the machine and prevents excessive vibration and noise in the machine due to an unbalanced load: by selecting high spin speeds the noise level increases.

• **CLEANING THE FILTER**

To ensure an impeccable function of the pump, check the filter regular and clean it if necessary.

• **THERMOSTAT KNOB**

This is set by turning the knob until it reaches the desired temperature.